

**In time of day mode you can set an hourly chime. To do this just press S1 to activate or deactivate. When activated, a bell icon shows next to the seconds digits**

Press **S3 MODE** button to move to Alarm 1 or Alarm 2/Time of Day display:

To set alarm time, Press and hold **S2** until digits flash. Press **S3** to choose digits to change. Press **S1** to change the digits. Press **S2** to exit setting.

The display shows the alarm time and time of day.

To activate the alarm, press **S1** whilst in alarm mode. An icon will display next to the seconds digit. When the alarm goes off, press any button to stop.

#### **Other Features:**

**Night Vision Backlight function:** Press **S4** and the EL backlight will display for 3 seconds. Press and hold the **S4** button until a light icon shows on the display. Pressing any button will light up the display for 3 seconds.

**Low Battery warning Indicator:** Change the battery when the low battery warning indicator appears.

**Power reset:** Should you need to reset the watch, hold down S1,S2 and S3 buttons simultaneously for 3 seconds until the display resets.